



Модуль опорный LMAB16

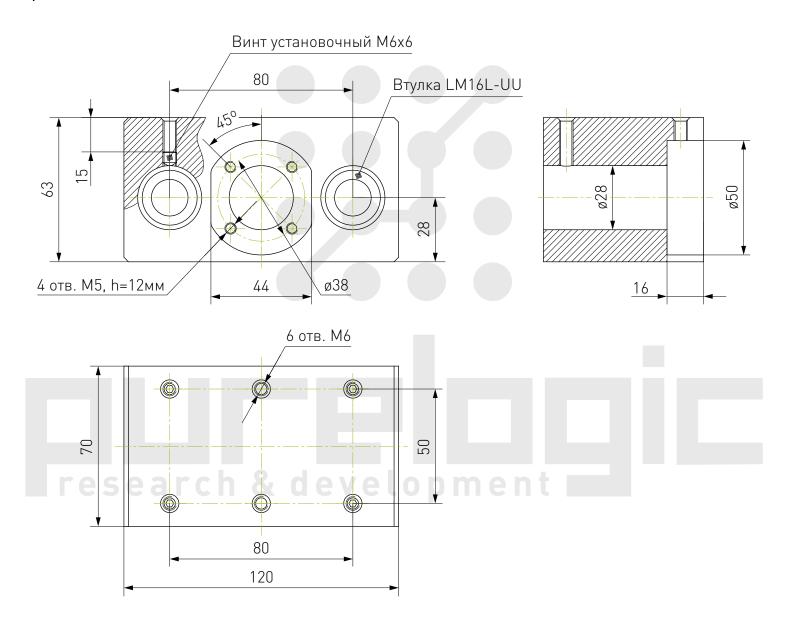

8 (800) 555-63-74




Модуль опорный LMAB20

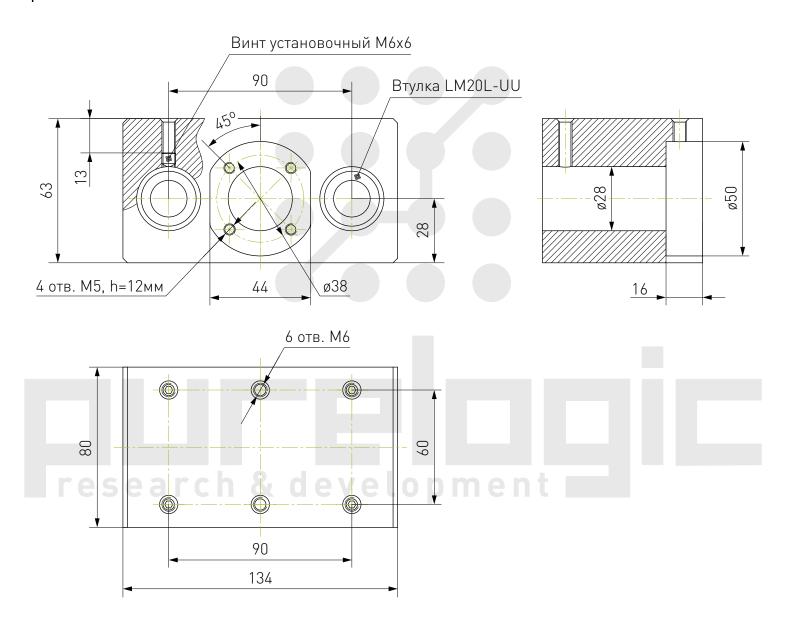

8 (800) 555-63-74



Модуль опорный LMAB25

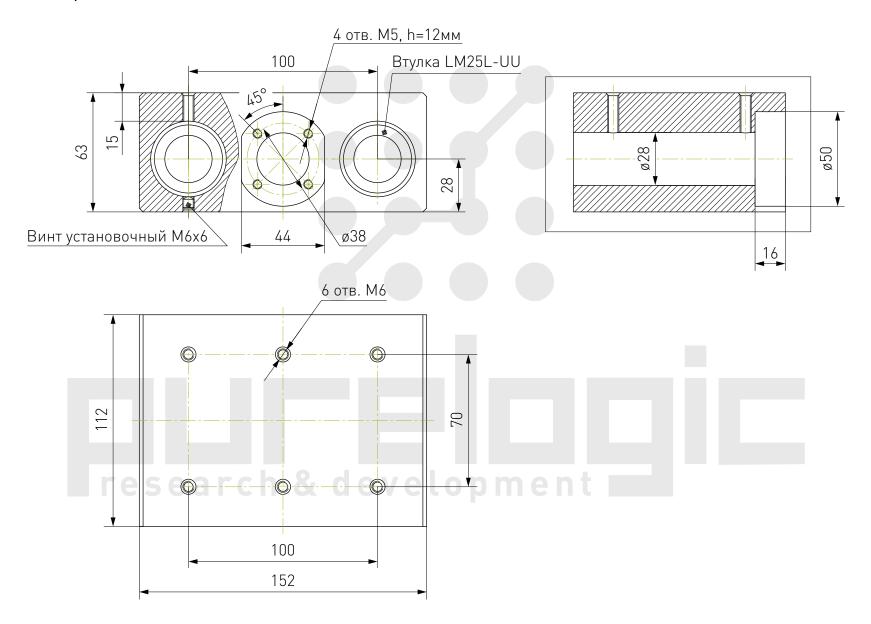

8 (800) 555-63-74